

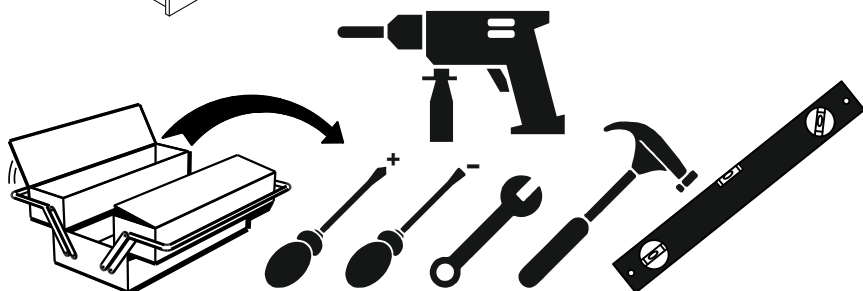
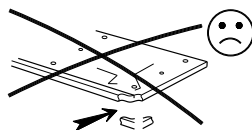
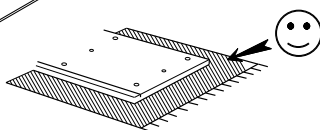
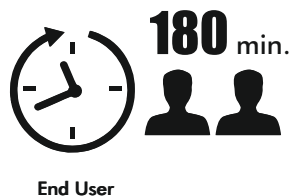


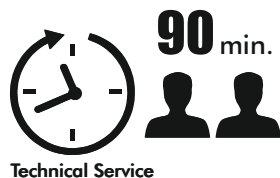


# MULTIMO

## 310-NOVA PLUS

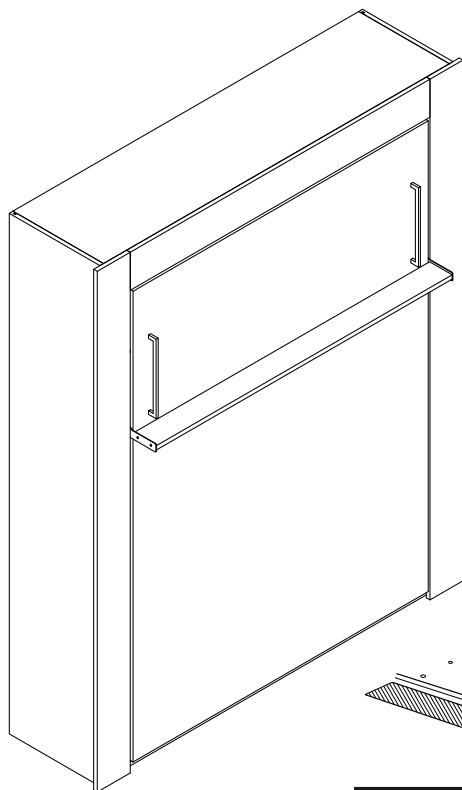

VIDEO




















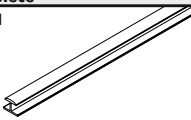


link

Assembly Instructions





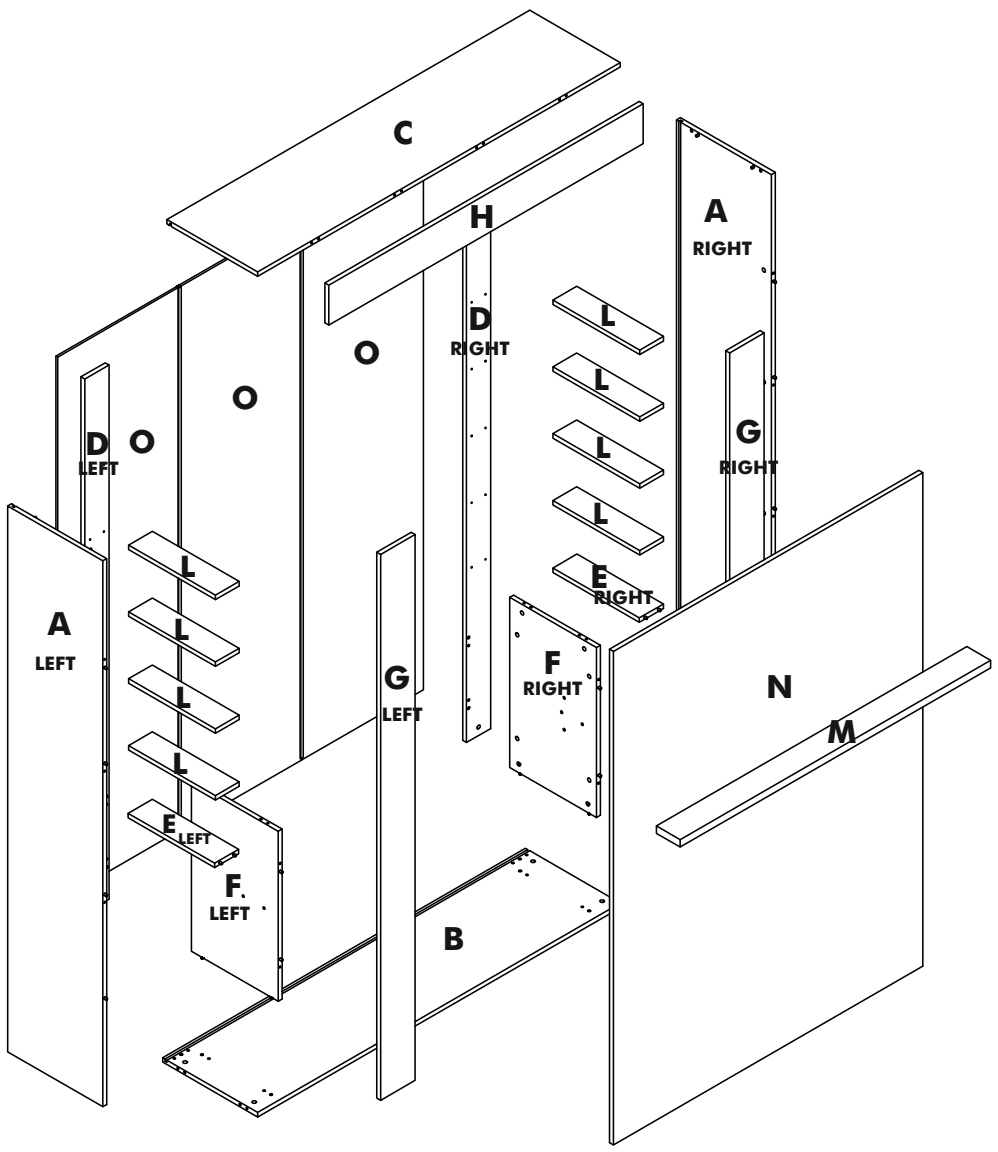
Track Title	(inch)				(mm)			
	Piece	Thickness	Length	Width	Piece	Thick	Height	Most
<b>A</b>		0,71	89,76	17,32	2	18	2280	440
<b>B</b>		0,71	66,69	17,32	1	18	1694	440
<b>C</b>		0,71	66,69	16,54	1	18	1694	420
<b>D</b>		0,71	87,87	4,41	2	18	2232	112
<b>E</b>		0,71	15,83	4,41	2	18	402	112
<b>F</b>		0,71	27,56	15,83	2	18	700	402
<b>G</b>		0,71	89,76	6,30	2	18	2280	160
<b>H</b>		0,71	57,87	5,51	1	18	1470	140
<b>I</b>		0,71	15,83	4,33	8	18	402	110
<b>K</b>		1,18	57,01	4,33	1	30	1448	110
<b>L</b>		0,71	81,89	56,85	1	18	2080	1444
<b>M</b>		0,31	88,90	22,40	3	8	2258	569

## Accessories List

<b>MXN 02</b>  <b>36 / piece</b>	<b>MNG - 01</b>  <b>36 / piece</b>	<b>KVL 01</b>  <b>48 / piece</b>	<b>TAP - 01</b>  <b>36 / piece</b>
<b>TFC - 01 (8x70) mm</b>  <b>3 / piece</b>	<b>DD - 01 ( R10 )</b>  <b>3 / piece</b>	<b>PL - 02 (8x22x1) mm</b>  <b>3 / piece</b>	<b>DSE - 01 (40x90x32) mm</b>  <b>3 / piece</b>
<b>VTB - 01 (4,8x16) mm</b>  <b>12 / piece</b>	<b>VDA - 01 ( 6,5x50 ) mm</b>  <b>4 / piece</b>	<b>VKP - 01 (22) mm</b>  <b>4 / piece</b>	<b>KP - 01 ( 224 ) mm</b>  <b>2 / piece</b>
<b>MKZ - 03</b>  <b>1 / piece 1200 N</b>	<b>TTC 01</b>  <b>4 / piece</b>	<b>IM - 02 (6x20) mm</b>  <b>6 / piece</b>	<b>PM - 01</b>  <b>32 / piece</b>
<b>VD - 02 (3,5x25) mm</b>  <b>16 / piece</b>	<b>H 01</b>  <b>2 / piece</b>	<b>SC - 76</b>  <b>2 / piece</b>	<b>TAP - 02</b>  <b>4 / piece</b>






<p>SC-85</p>  <p>2 / piece</p>	<p>ER - 01</p>  <p>12 / piece</p>
--	--








## STEP 1

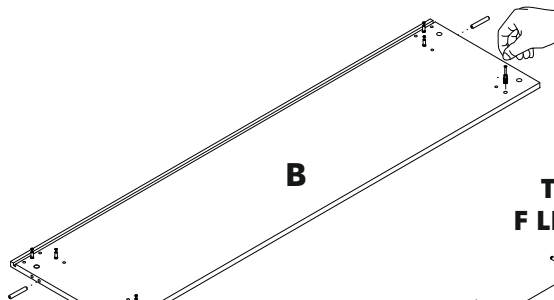


**TRACK TITLE  
F LEFT / F RIGHT**

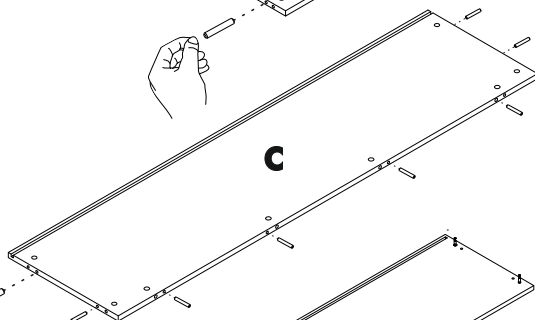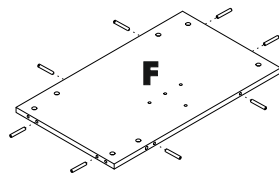


**TRACK TITLE  
A LEFT / A RIGHT**

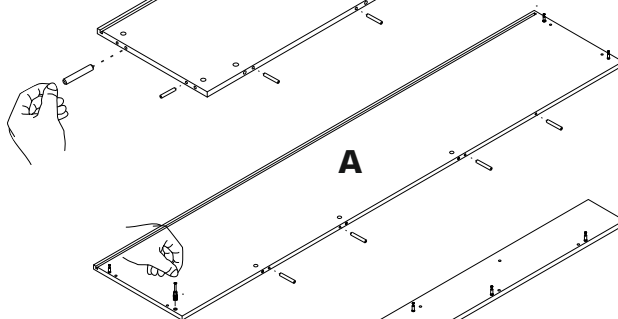



**TRACK TITLE  
D LEFT / D RIGHT**

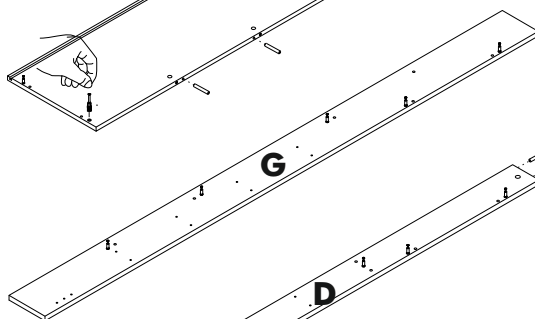


**TRACK TITLE  
G LEFT / G RIGHT**

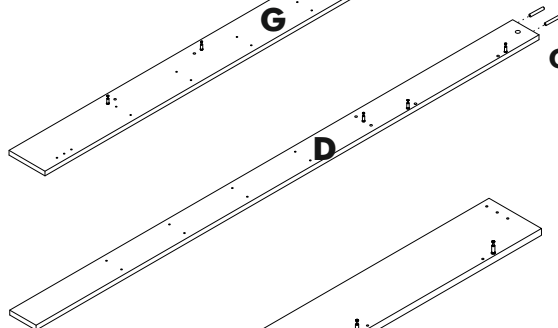

**TRACK TITLE  
E LEFT / E RIGHT**

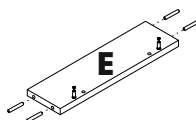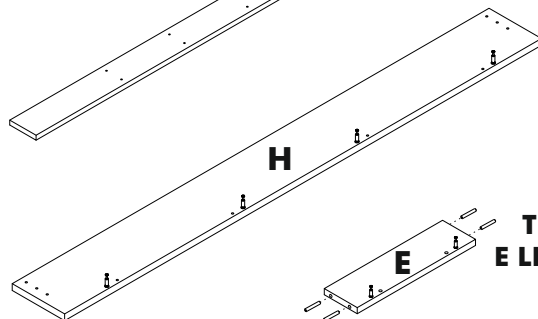

**VIDEO**

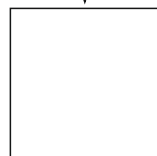




## STEP 2




MNG - 01

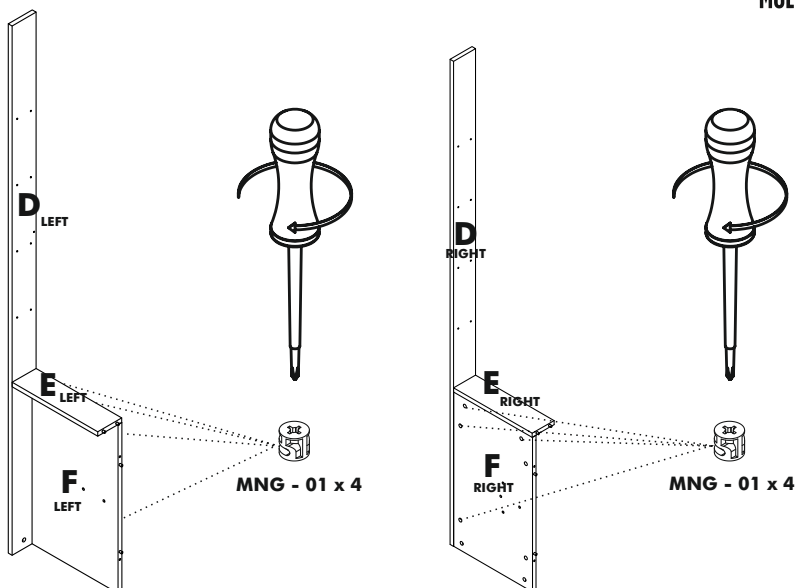

## STEP 3




MNG - 01

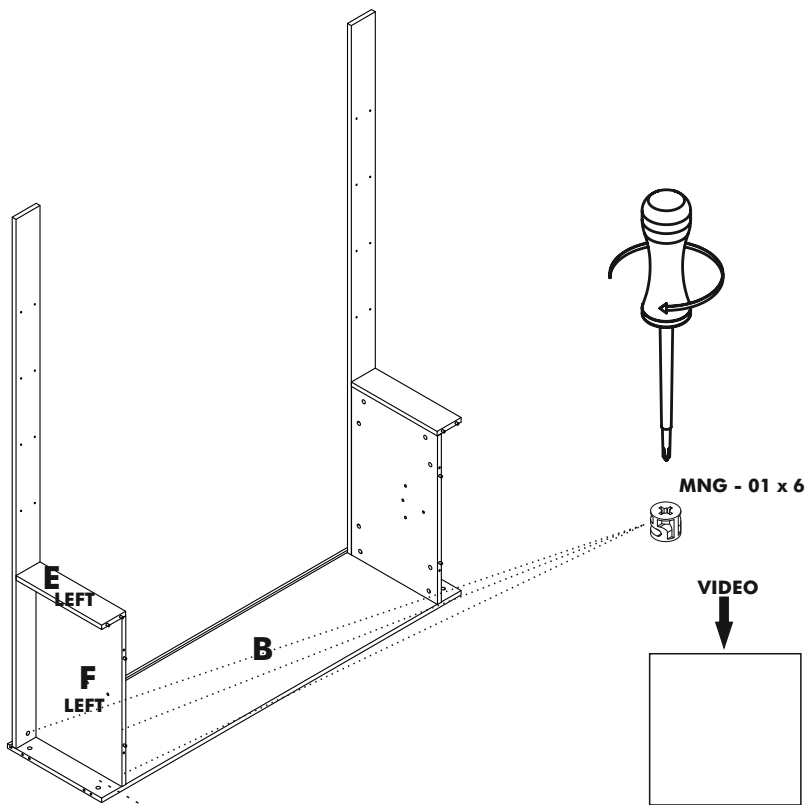





## STEP 4

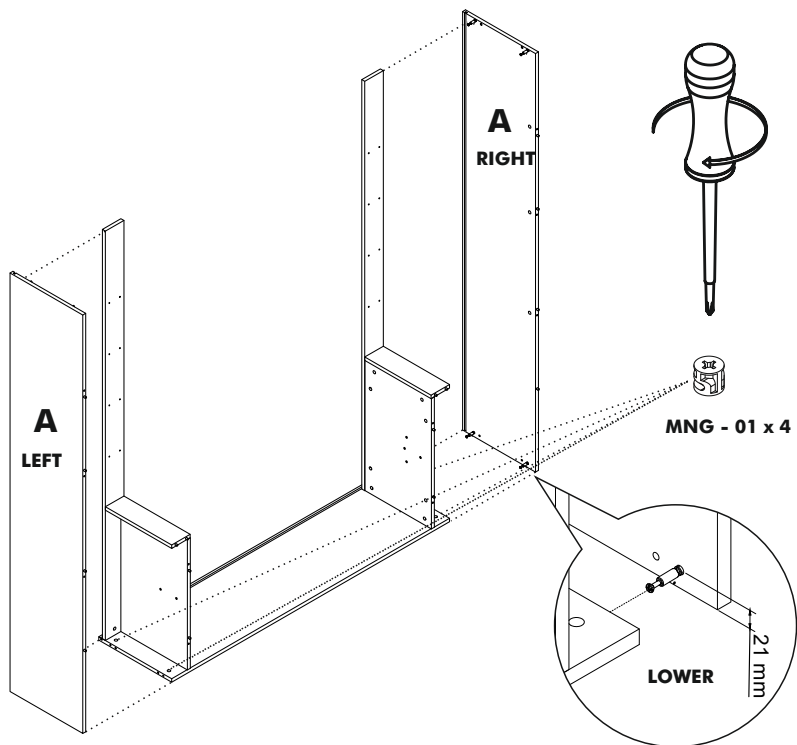

## STEP 5

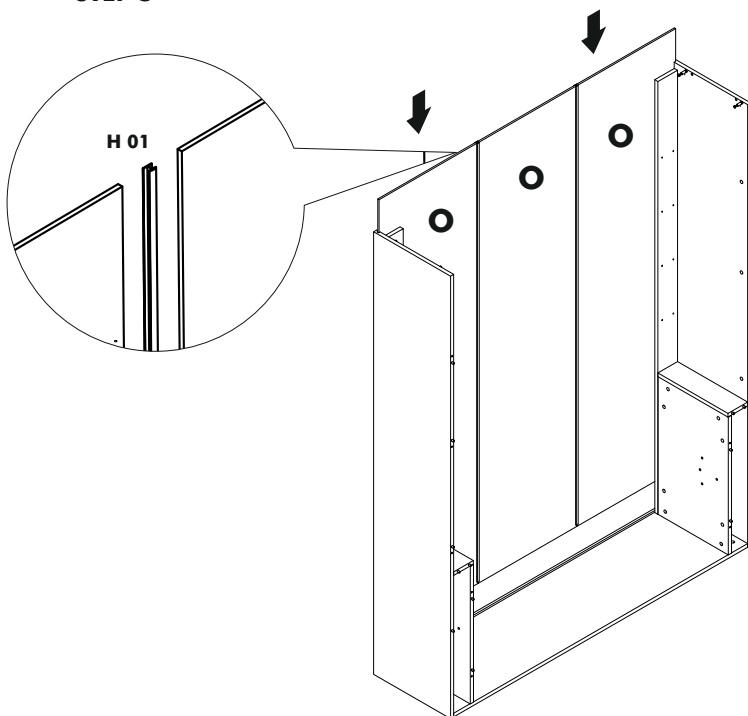



**VIDEO**

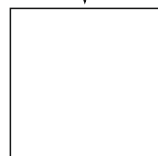



link




## STEP 6

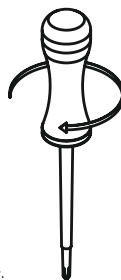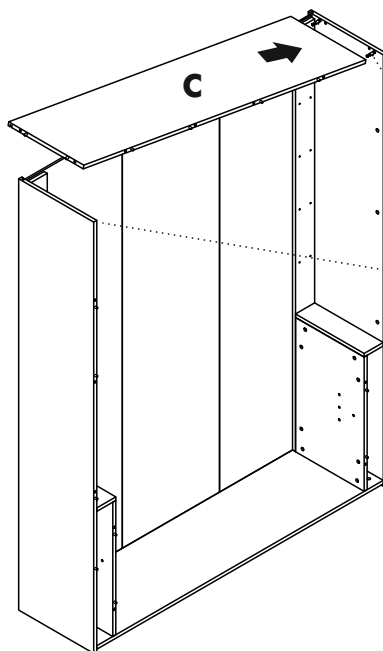

## STEP 7

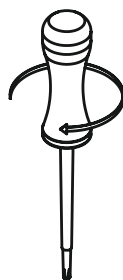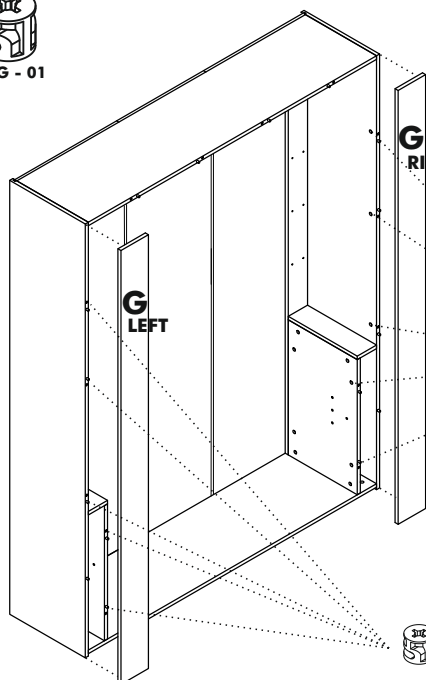


VIDEO




link




## STEP 8

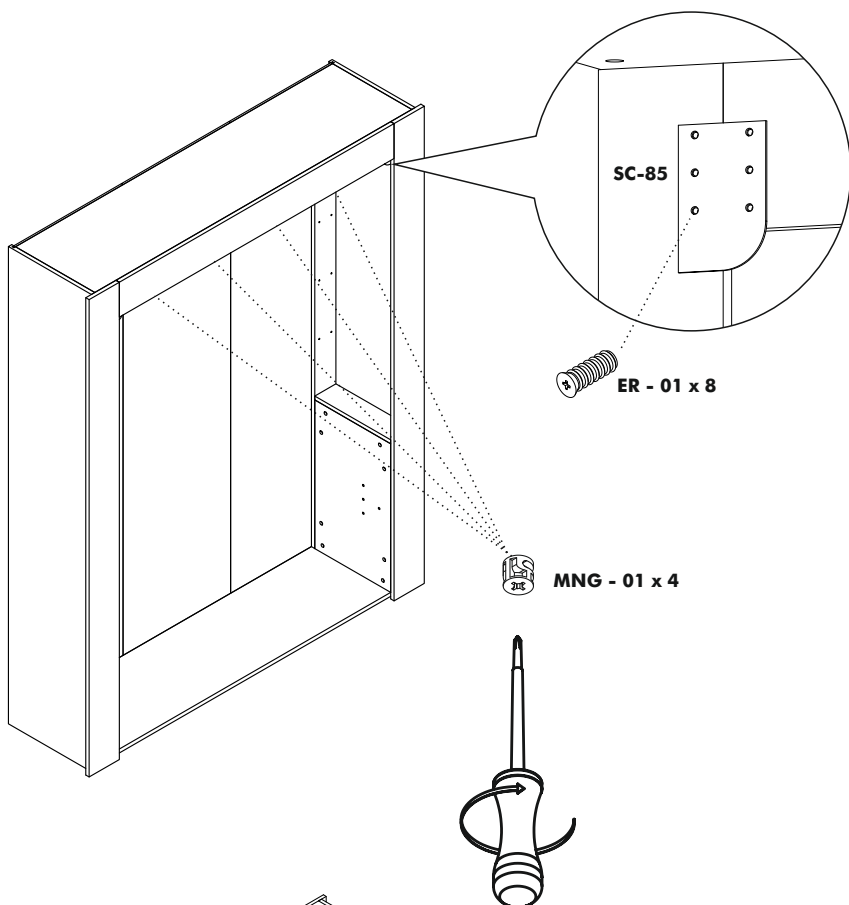

## STEP 9

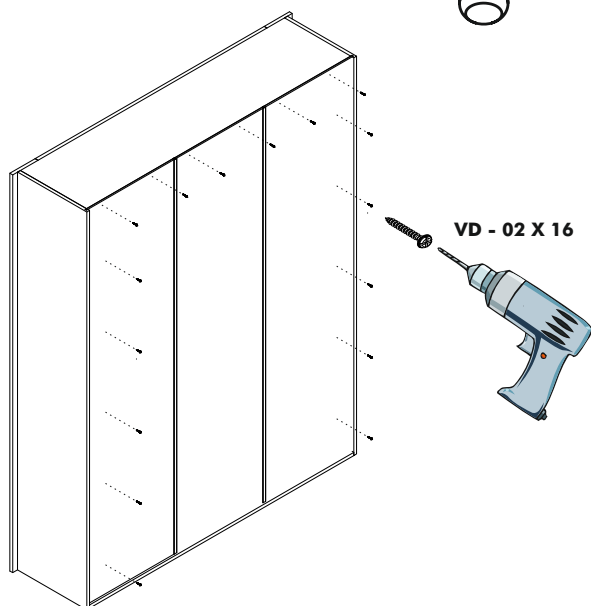

**VIDEO**

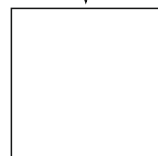

link




**STEP 10**



Ø 10 mm / 0,254 inch

DD - 01

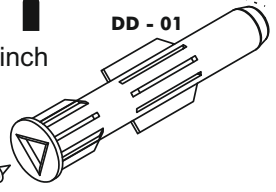

PL - 02

TFC - 01


VTB - 01

DSE - 01


PM - 01 X 32



TAP - 01

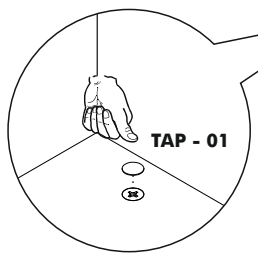


**VIDEO**

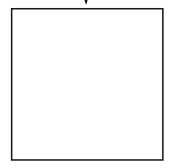



link




## STEP 11

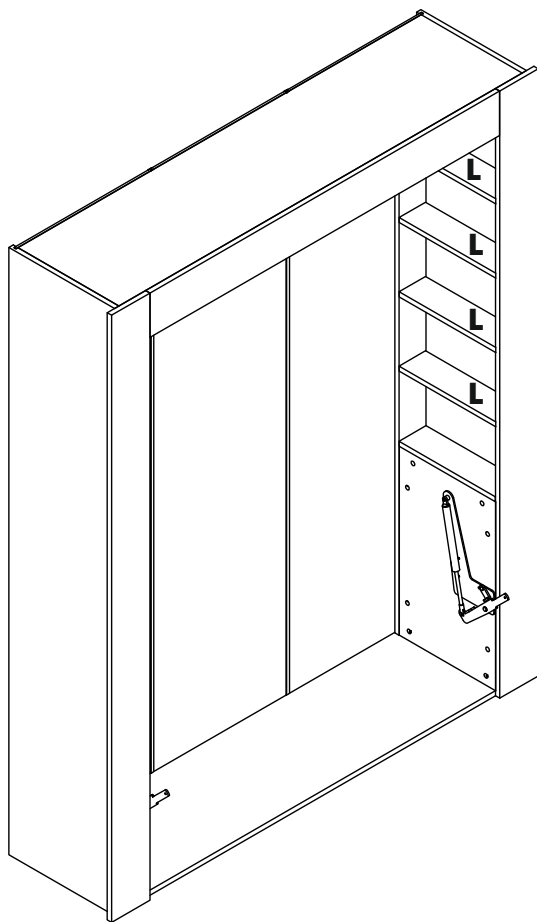

**CAUTION**  
**DO NOT UNLOCK BEFORE INSTALL**

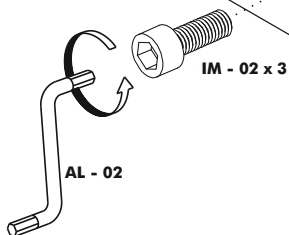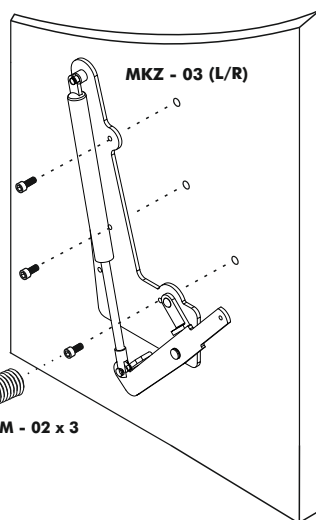

**VIDEO**

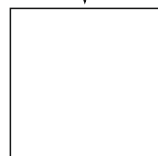


link




## STEP 12


45-50

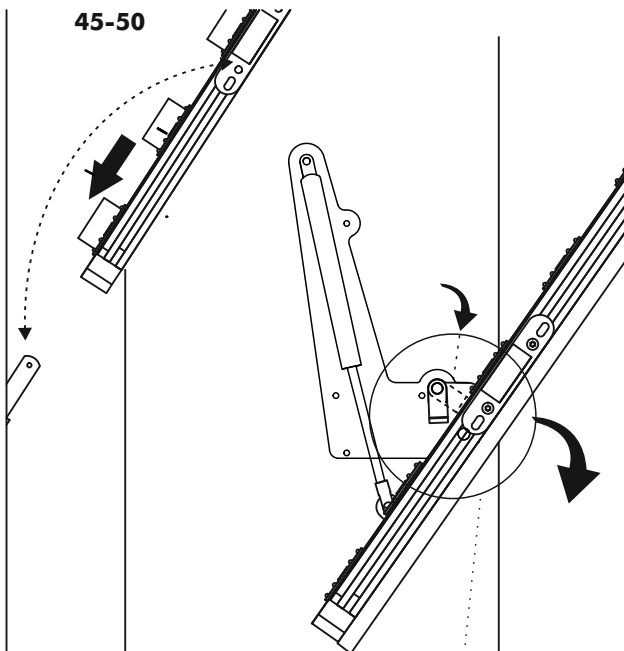

**LET THE STOPPER LOCK MOVE DOWN !!!**

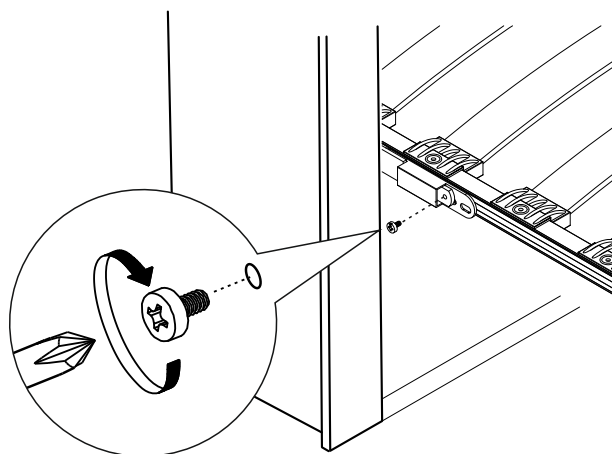


**VIDEO**

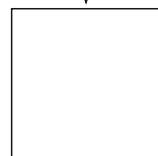


link




## STEP 13

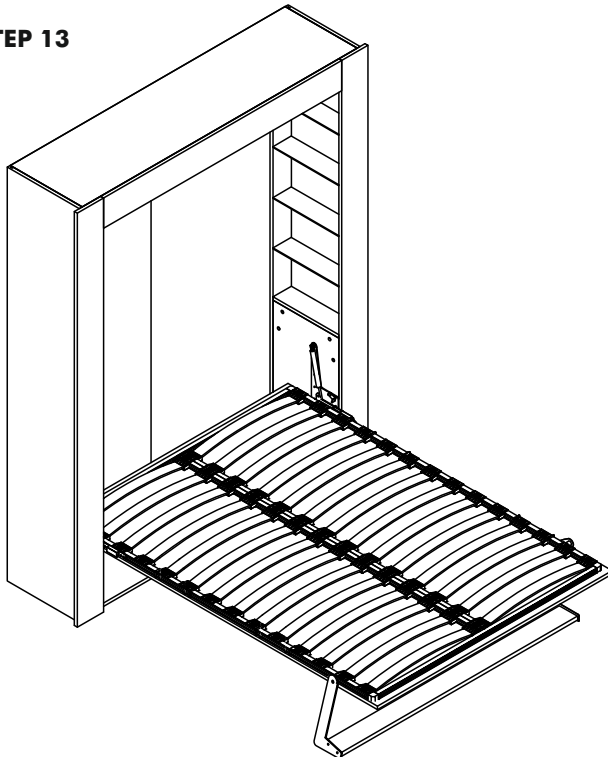


VDA - 01 X 4

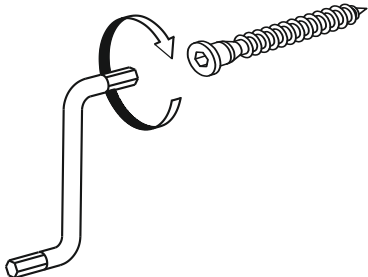

SC - 76

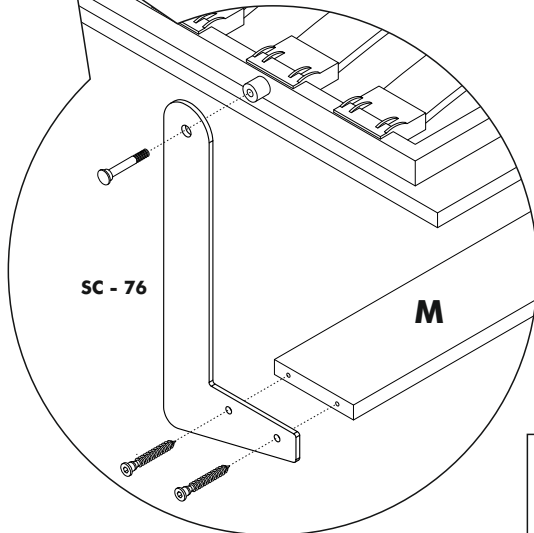


VIDEO







## STEP 14

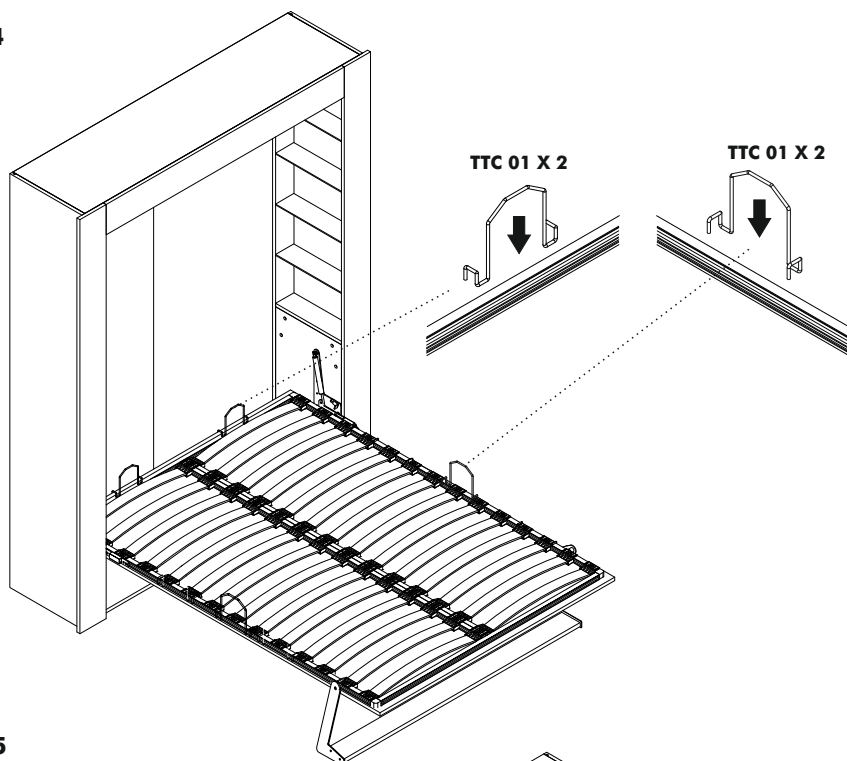

## STEP 15

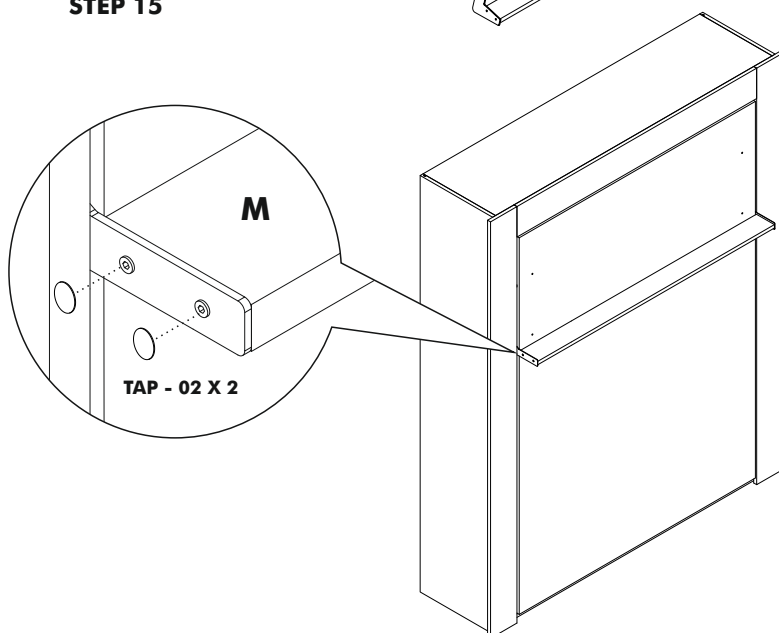


**VIDEO**

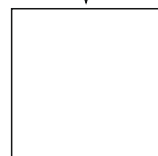


link



## STEP 13

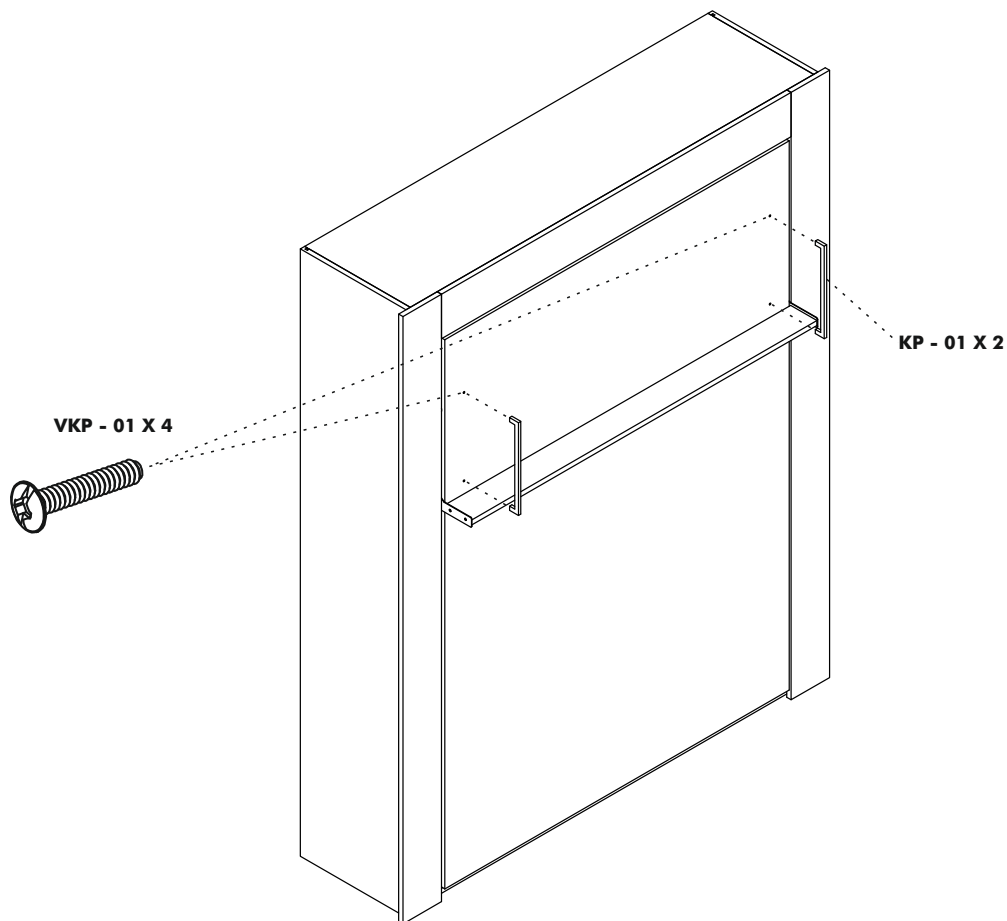

**VIDEO**

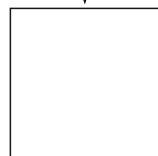

link



## ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheet rock like material without properly attaching to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
  - a. Always use provided ladder when accessing top bunk.
  - b. Be slow, careful and aware of surroundings when opening top bunk.
  - c. Do not horseplay. Beds are to be slept on only.
  - d. Some have legs that fully extend when open- be aware of where the leg is and will be.





**MULTiMO**

[www.multimo.com](http://www.multimo.com)